

CAUTIONS AND WARNINGS:

1. This product *must* be installed in accordance with the applicable installation code by a licensed electrician familiar with the construction and operation of the product and hazards involved.
2. Power *must* be **OFF** when connecting the fixture. "Hot plugging" the light engine and driver will damage the LED source.
3. The light engine is low voltage and is factory wired to the driver.
DO NOT CONNECT LIGHT ENGINE TO THE BUILDING AC POWER.

DISCLAIMER: Screw and hardware on the outer edge of adjustable head are **NOT** to be tampered with. **ANY** adjustment **WILL VOID** warranty.



A Anchor mounting rails into joists with screws. Slide Bracket Pan with butterfly brackets into mounting rails. Clip mounting rails to secure.



B Bottom of bracket pan should either be flush with bottom of ceiling joists or 1/8" higher than bottom of joists.



C Slide Flange receiver into opening.



E Finalize electrical wiring/connections. Then slide light assembly into receiver.

90° Adjustable Clamp on receiver (retractable)



CLOSEUP
Use a Phillips screwdriver to adjust height of the ceiling clamp to secure a tight fit between GWB ceiling and light fixture.



D Tighten screws to clamp receiver to ceiling.



F Ball plungers(4) on light assembly clicks into 4 slots on receiver.



G After light assembly locks into the flanged receiver, slide & lock flanged trim into the receiver.



IMPORTANT
Ball Plungers on round flanged trim and light assembly needs to click into receiver

*Trim in view is GR- Round Flanged Trim

How to secure with safety cables?



Installation Instructions for Bracket Pan Round Flanged Trim GRF, GR, GRO, GRW

TRIMS AVAILABLE



Repeat process for all GR-Round Flanged.

