


CAUTIONS AND WARNINGS:

1. This product *must* be installed in accordance with the applicable installation code by a licensed electrician familiar with the construction and operation of the product and hazards involved.
2. Power *must* be **OFF** when connecting the fixture. "Hot plugging" the light engine and driver will damage the LED source.
3. The light engine is low voltage and is factory wired to the driver.
DO NOT CONNECT LIGHT ENGINE TO THE BUILDING AC POWER.

DISCLAIMER: Screw and hardware on the outer edge of adjustable head are **NOT** to be tampered with. **ANY** adjustment **WILL VOID** warranty.



A Adjustable mounting rails anchor housing to ceiling joists with screws

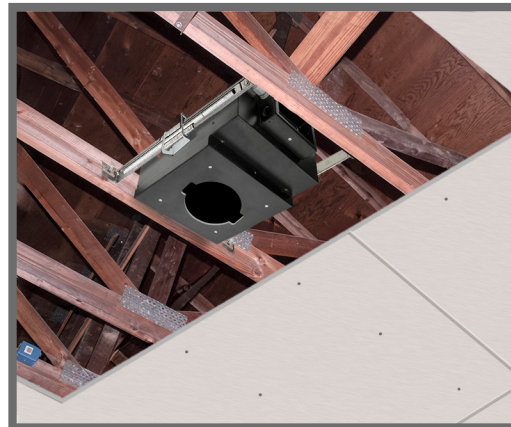

B After housing is secured, continue GWB ceiling install

Ceiling cutout diameter for Round trim $4\frac{3}{4}$ "



C Slide Flange receiver into opening.



E Finalize electrical wiring/connections. Then slide light assembly into receiver.

90° Adjustable Clamp on receiver (retractable)



CLOSEUP

Use a Phillips screwdriver to adjust height of the ceiling clamp to secure a tight fit between GWB ceiling and light fixture.



D Tighten screws to clamp receiver to ceiling



F Ball plungers(4) on light assembly clicks into 4 slots on receiver.

G After light assembly locks in the flanged receiver, slide & lock flanged trim into the receiver.



IMPORTANT
Ball Plungers on round flanged trim and light assembly needs to click into receiver

*Trim in view is GR- Round Flanged Trim

Repeat process for all GR-Round Flanged.

How to secure with safety cables?



Installation Instructions for IC Rated Round Flanged Trim GRF, GR, GRO, GRW

TRIMS AVAILABLE



GRF - Round Flanged



GR - Round Flanged



GRO - Round Flanged



GRW - Round Flanged

GRAFFITI
LIGHTING
by: Specialty Lighting Industries