


CAUTIONS AND WARNINGS:

1. This product *must* be installed in accordance with the applicable installation code by a licensed electrician familiar with the construction and operation of the product and hazards involved.
2. Power *must* be **OFF** when connecting the fixture. "Hot plugging" the light engine and driver will damage the LED source.
3. The light engine is low voltage and is factory wired to the driver.
DO NOT CONNECT LIGHT ENGINE TO THE BUILDING AC POWER.

DISCLAIMER: Screw and hardware on the outer edge of adjustable head are **NOT** to be tampered with. ANY adjustment **WILL VOID** warranty.



A Adjustable mounting rails anchor housing to ceiling joists with screws

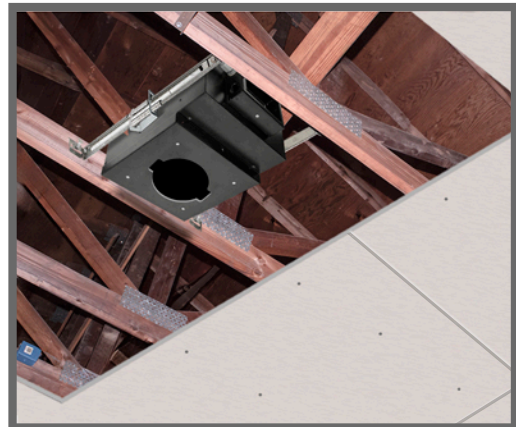


B After housing is secured, continue GWB ceiling install



C Cutout opening for light install.



E Plaster receiver flange. Finish electrical

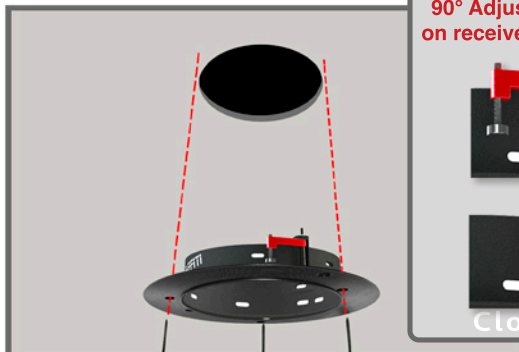

D Attach receiver with GWB screws (4).
**See Closeup- tighten receiver to GWB Ceiling.*

90° Adjustable Clamp on receiver (retractable)




Close-up



CLOSEUP


Use a Phillips screwdriver to adjust height of the ceiling clamp to secure a tight fit between GWB ceiling and light fixture.

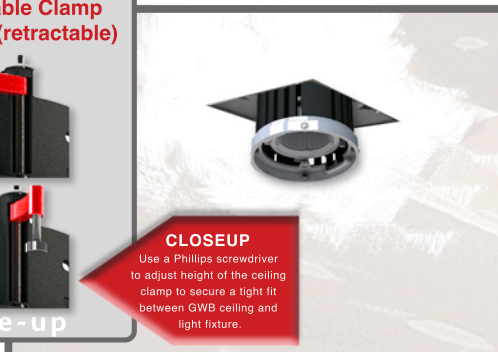

F Slide light assembly into receiver. Finish plastering GWB.



G After plaster ceiling has dried, paint over the plaster ceiling.

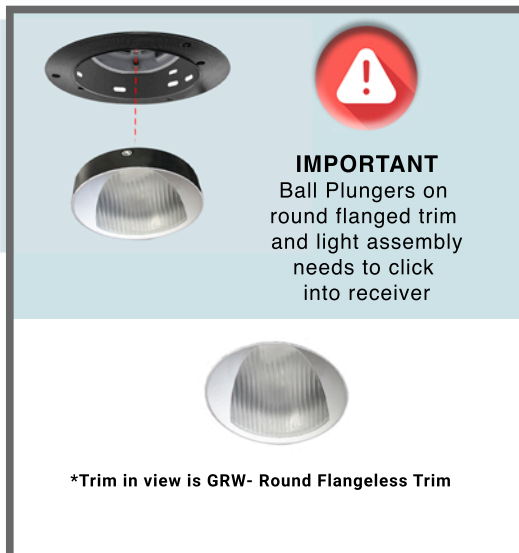

IMPORTANT
Ball Plungers on round flanged trim and light assembly needs to click into receiver

**Trim in view is GRW- Round Flangeless Trim*

H Make sure trim ball plungers clicks into receiver to secure.

How to secure with safety cables?



Safety cable clip clicks into Receiver safety cable

Push-pin Fastener

Push-pin fastener locks trim safety cable trim to lamp assembly

Installation Instructions for IC Rated Round Flangeless Trim w/housing GRF, GR, GRO, GRW

TRIMS AVAILABLE

