

- 1. This product must be installed in accordance with the applicable installation code by a licensed electrician familiar with the construction and operation of the product and hazards involved.
- 2. Power must be OFF when connecting the fixture. "Hot plugging" the light engine and driver will damage the LED source.
- 3. The light engine is low voltage and is factory wired to the driver. DO NOT CONNECT LIGHT ENGINE TO THE **BUILDING AC POWER.**

DISCLAIMER: Screw and hardware on the outer edge of adjustable head are **NOT** to be tampered with. ANY adjustment WILL VOID warranty



ceiling joists with screws













