

CAUTIONS AND WARNINGS:

1. This product *must* be installed in accordance with the applicable installation code by a licensed electrician familiar with the construction and operation of the product and hazards involved.
2. Power *must* be **OFF** when connecting the fixture. "*Hot plugging*" the light engine and driver will damage the LED source.
3. The light engine is low voltage and is factory wired to the driver. **DO NOT CONNECT LIGHT ENGINE TO THE BUILDING AC POWER.**

DISCLAIMER: Screw and hardware on the outer edge of adjustable head are **NOT** to be tampered with. **ANY** adjustment **WILL VOID** warranty.



A Adjustable mounting rails anchor housing to ceiling joists with screws




B Adjustable mounting rails anchor housing to ceiling joists with screws



C Paint over ceiling before installation.




E Tighten screws to clamp receiver to ceiling. Finalize electrical wiring/connections.

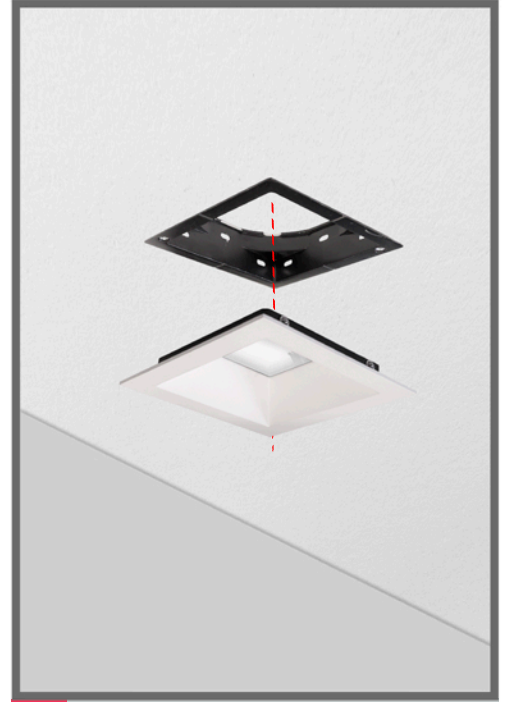


G After light assembly has been installed. Click flanged trim ball plungers (4) into receiver slots.



D Slide receiver into ceiling.

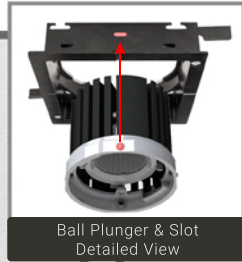

F Slide light assembly into receiver. Ball plungers(4) on light assembly clicks into 4 slots on receiver

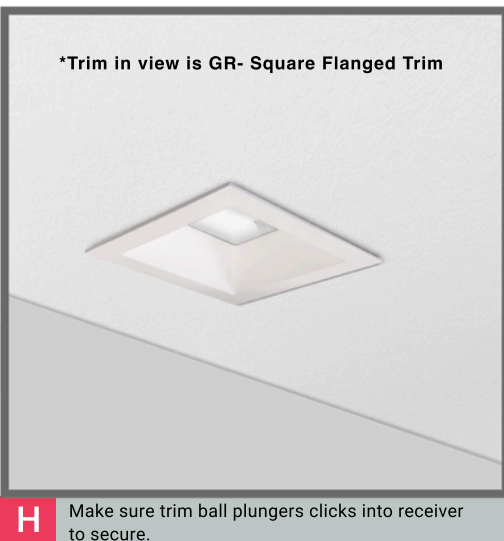

*Trim in view is GR- Square Flanged Trim

H Make sure trim ball plungers clicks into receiver to secure.

How to secure with safety cables?



Installation Instructions for Bracket Pan Square Flanged Trim GRF, GR, GRO, GRW

TRIMS AVAILABLE

