

## CAUTIONS AND WARNINGS:

1. This product *must* be installed in accordance with the applicable installation code by a licensed electrician familiar with the construction and operation of the product and hazards involved.
2. Power *must* be **OFF** when connecting the fixture. "Hot plugging" the light engine and driver will damage the LED source.
3. The light engine is low voltage and is factory wired to the driver.  
**DO NOT CONNECT LIGHT ENGINE TO THE BUILDING AC POWER.**

**DISCLAIMER:** Screw and hardware on the outer edge of adjustable head are **NOT** to be tampered with. **ANY** adjustment **WILL VOID** warranty.



**A** Adjustable mounting rails anchor housing to ceiling joists with screws



**B** Adjustable mounting rails anchor housing to ceiling joists with screws




**C** Cutout opening for light install.




**E** Plaster receiver flange. Finish electrical



**G** After plaster ceiling has dried, paint over the plaster ceiling.

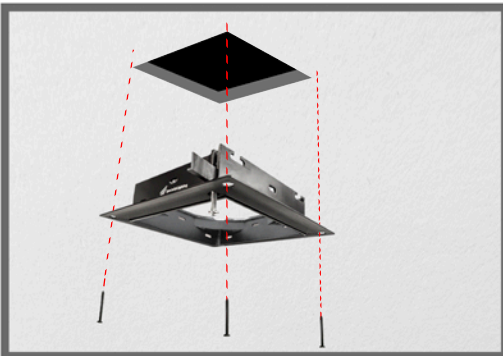

**D** Attach receiver with GWB screws (4).

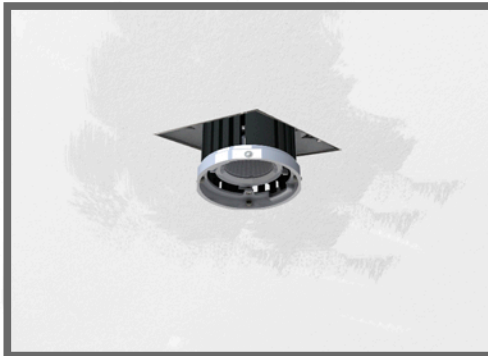

**F** Slide light assembly into receiver. Finish plastering GWB.



**H** Make sure trim ball plungers clicks into receiver to secure.

### How to secure with safety cables?



## Installation Instructions for Bracket Pan Square Flangeless Trim w/ Housing GRF, GR, GRO, GRW

### TRIMS AVAILABLE

