
CAUTIONS AND WARNINGS:

- This product must be installed in accordance with the applicable installation code by a licensed electrician familiar with the construction and operation of the product and hazards involved.
- 2. Power must be **OFF** when connecting the fixture. "Hot plugging" the light engine and driver will damage the LED source.
- 3. The light engine is low voltage and is factory wired to the driver.

 DO NOT CONNECT LIGHT ENGINE TO THE BUILDING AC POWER.

<u>DISCLAIMER:</u> Screw and hardware on the outer edge of adjustable head are **NOT** to be tampered with. **ANY** adjustment **WILL VOID** warranty.



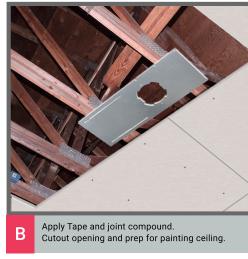









by: Specialty Lighting Industries





Push-pin fastener locks trim safety cable trim to lamp assembly