

CAUTIONS AND WARNINGS:

1. This product *must* be installed in accordance with the applicable installation code by a licensed electrician familiar with the construction and operation of the product and hazards involved.
2. Power *must* be **OFF** when connecting the fixture. "Hot plugging" the light engine and driver will damage the LED source.
3. The light engine is low voltage and is factory wired to the driver.
DO NOT CONNECT LIGHT ENGINE TO THE BUILDING AC POWER.

DISCLAIMER: Screw and hardware on the outer edge of adjustable head are **NOT** to be tampered with. **ANY** adjustment **WILL VOID** warranty.



A Install ceiling.




B Apply tape and joint compound. Cutout opening and prep for painting ceiling.



C Slide Flange receiver into opening.



E Finalize electrical wiring/connections. Then slide light assembly into receiver.

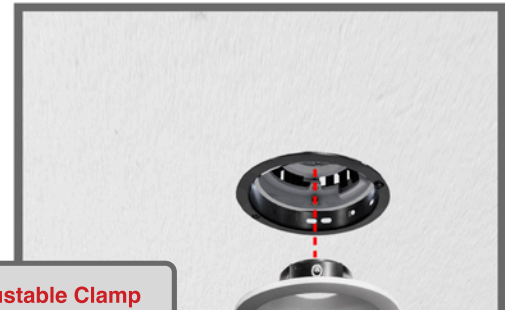

G After light assembly locks in the flanged receiver, slide & lock flanged trim into the receiver.



D Tighten screws to clamp receiver to ceiling



F Ball plungers(4) on light assembly clicks into 4 slots on receiver.



90° Adjustable Clamp on receiver (retractable)

CLOSEUP
Use a Phillips screwdriver to adjust height of the ceiling clamp to secure a tight fit between GWB ceiling and light fixture.



Repeat process for all GR-Round Flanged.

How to secure with safety cables?



Installation Instructions for Retrofit Round Flanged Trim / no housing GRF, GR, GRO, GRW

TRIMS AVAILABLE

