


CAUTIONS AND WARNINGS:

1. This product *must* be installed in accordance with the applicable installation code by a licensed electrician familiar with the construction and operation of the product and hazards involved.
2. Power *must* be **OFF** when connecting the fixture. "Hot plugging" the light engine and driver will damage the LED source.
3. The light engine is low voltage and is factory wired to the driver.
DO NOT CONNECT LIGHT ENGINE TO THE BUILDING AC POWER.

DISCLAIMER: Screw and hardware on the outer edge of adjustable head are **NOT** to be tampered with. **ANY** adjustment **WILL VOID** warranty.



A Install Ceiling

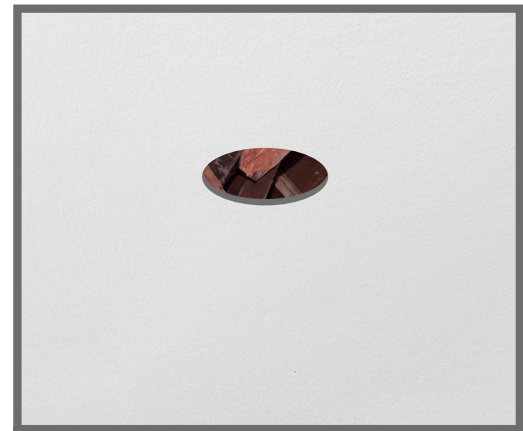


A Apply tape and joint compound. Cutout opening and prep ceiling for painting.



C Cutout opening for light install.



E Plaster receiver flange. Finish electrical

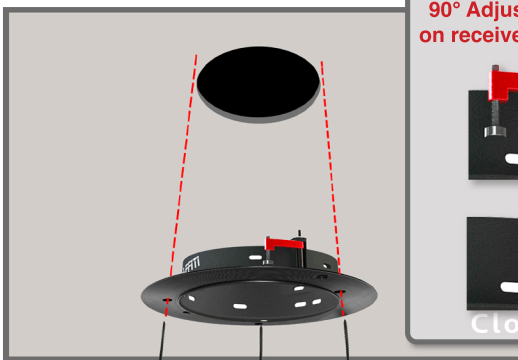


D Attach receiver with GWB screws (4).
*See Closeup- tighten receiver to GWB Ceiling.

90° Adjustable Clamp on receiver (retractable)



 Close-up




CLOSEUP

Use a Phillips screwdriver to adjust height of the ceiling clamp to secure a tight fit between GWB ceiling and light fixture.

F Slide light assembly into receiver.
Finish plastering GWB.



G After plaster ceiling has dried, paint over the plaster ceiling.

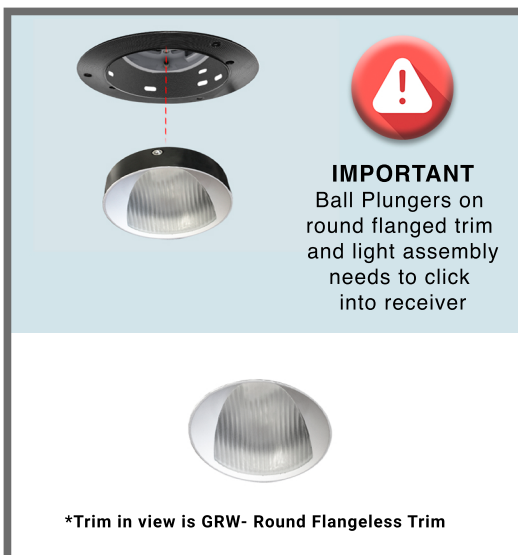

H Make sure trim ball plungers click into receiver to secure.

How to secure with safety cables?



Installation Instructions for Retrofit Round Flanged Trim GRF, GR, GRO, GRW

TRIMS AVAILABLE

