




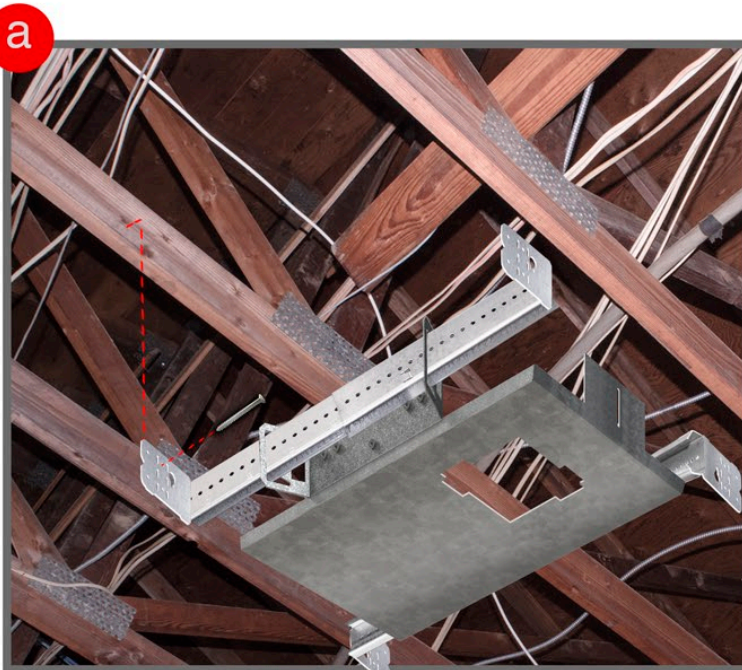

Exposed Ceiling Joists

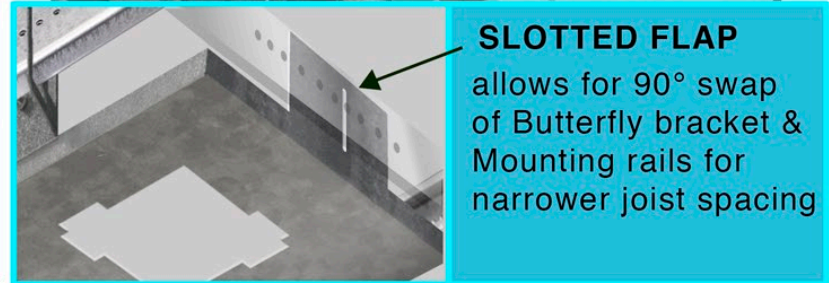

Step A- Anchor mounting rails into joists with screws. Slide Bracket Pan with butterfly brackets into mounting rails. Clip mounting rails to secure.

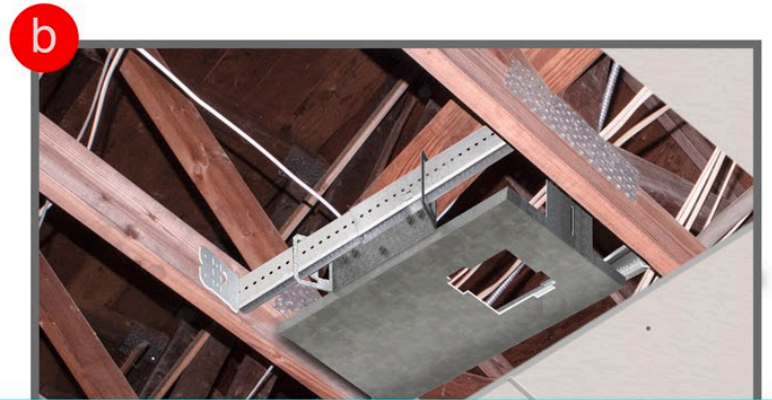


Step B- Bottom of bracket pan should either be flush with bottom of ceiling joists or 1/8" higher than bottom of joists




Closeup
Screws (2) secure trim to GWB ceiling with adjustable ceiling clamp. Tighten screw till tight.



Step E- Plaster receiver flange. Finish Electrical.
Step E1- Apply tape & joint compound
Step F- Slide light assembly into receiver. Finish plastering GWB.

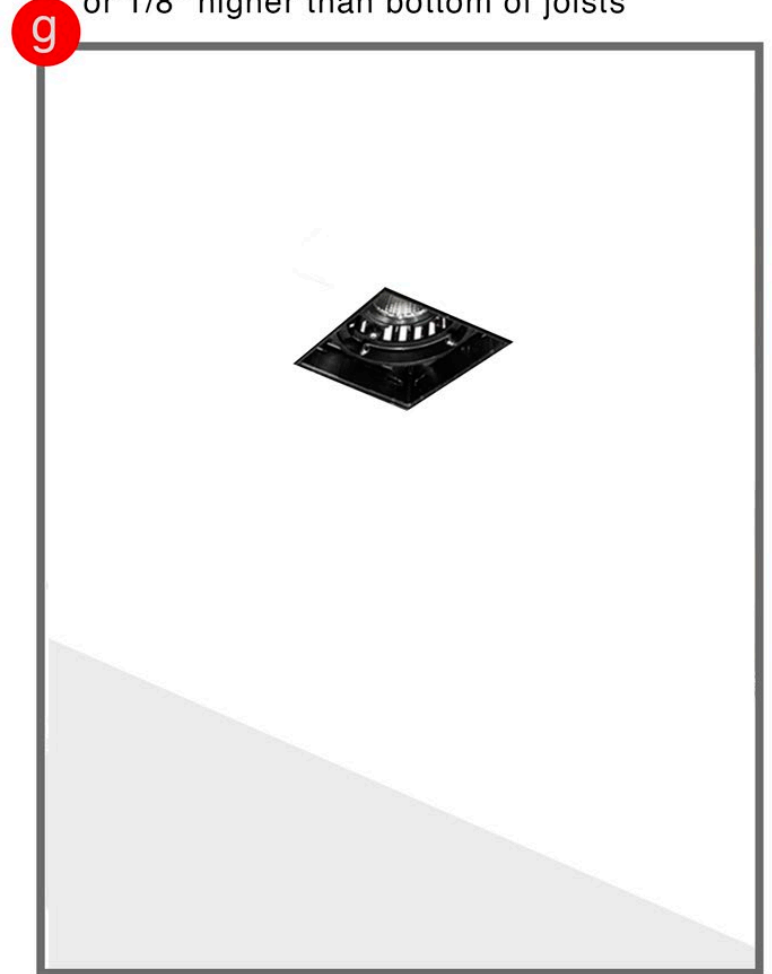


Step G- After plaster ceiling has dried, paint over the plaster ceiling.

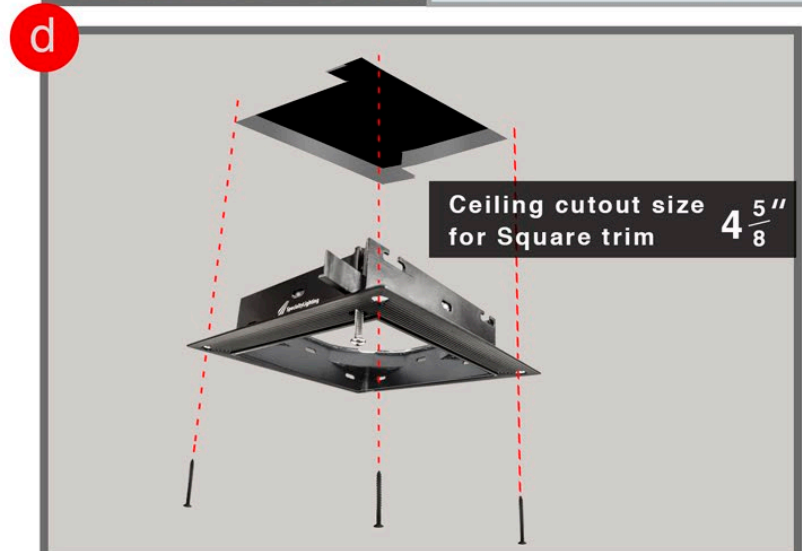

Ceiling cutout size for Square trim $4 \frac{5}{8}$ "

Step C- Cutout opening for light install.
Step D- Attach receiver with GWB screws (4).
See Closeup- tighten receiver to GWB Ceiling.

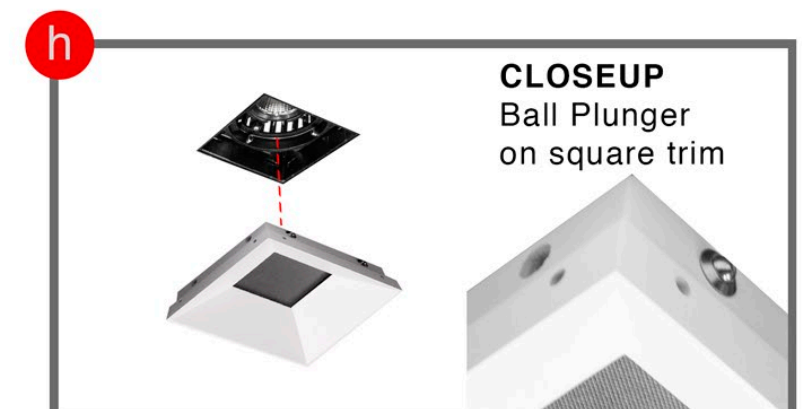

Closeup
Ball Plunger on square trim



*Trim in view is GR- Square Flangeless

Step H- Make sure trim ball plungers clicks into receiver to secure.

How to secure with safety cables?



Safety cable clip clicks into Plaster Receiver safety cable

Push-pin Fastener

Push-pin fastener locks trim safety cable trim to lamp assembly



Bracket Pan Install Plaster Receiver/ Square ZT Trim Instruction Sheet for GRF, GR, GRO, GRW Series

TRIMS AVAILABLE

