

Exposed Ceiling Joists




Step A- Anchor mounting rails into joists with screws. Slide Bracket Pan with butterfly brackets into mounting rails. Clip mounting rails to secure.



Step B- Bottom of bracket pan should either be flush with bottom of ceiling joists or 1/8" higher than bottom of joists



Step C- Install ceiling and cut opening. Paint drywall. Slide flange receiver into opening. Step D- Tighten screws to clamp receiver to ceiling.

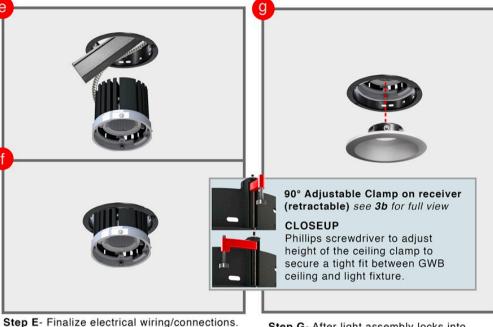

Then slide light assembly into receiver. Step F- Ball plungers(4) on light assembly clicks into 4 slots on receiver.


Safety cable clip

safety cable

clicks into Receiver

How to secure with safety cables?

Step G- After light assembly locks into the flanged receiver, slide & lock flanged trim into the receiver.

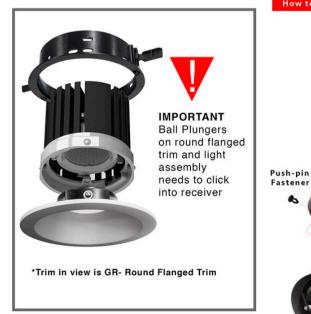

Push-pin fastener locks trim safety cable trim o lamp assembly



Bracket Pan Flanged Trim/ no Housing Instruction Sheet for

pecialtyLighting



Repeat process for all GR-Round Flanged.