




Step A- Slide drop pan over metal rails of suspended ceiling. Drop pan can be used as a template. Lay drop pan on top of tile, position, draw shape onto tile, cutout.

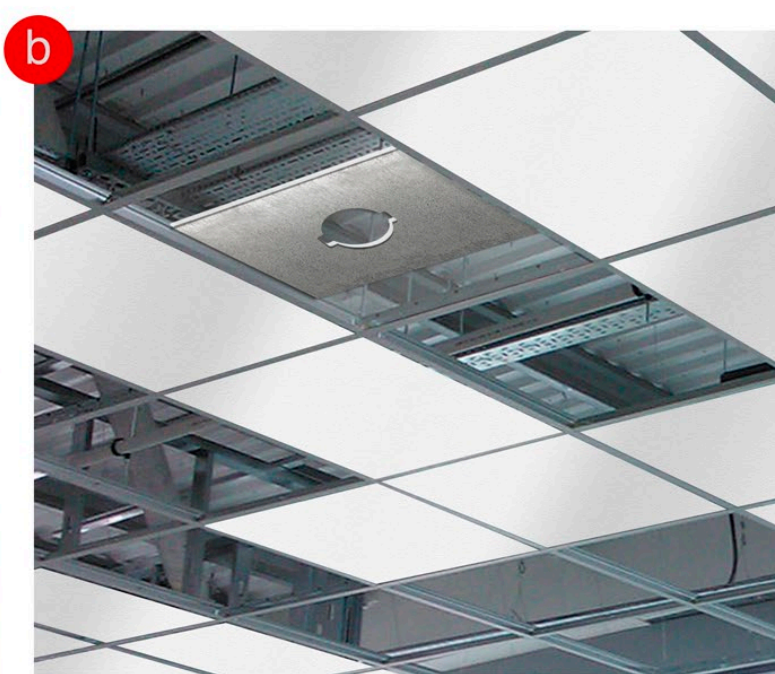

Step B- Make sure dropped pan has enough clearance beneath for ceiling tile install. Tile slides in underneath dropped pan.

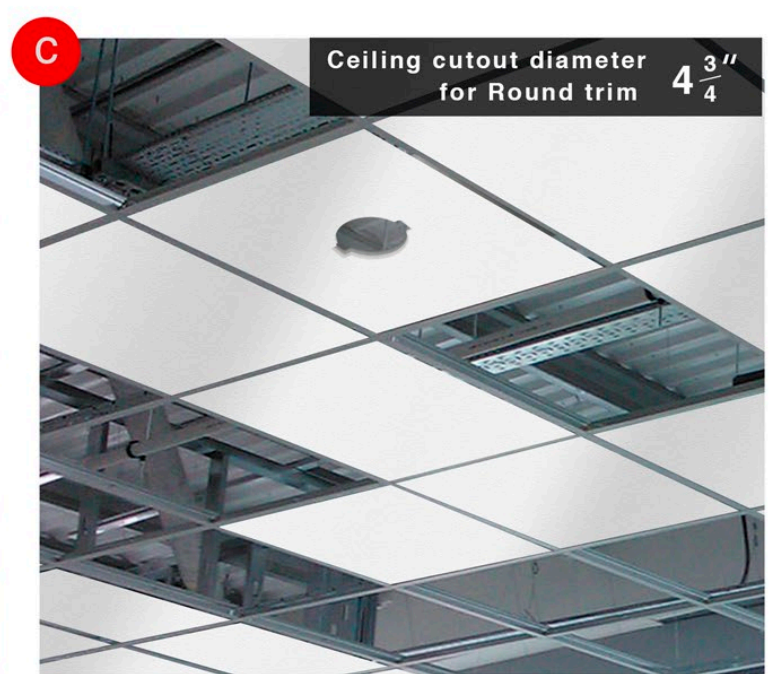

Step C- Check to see that dropped pan is resting securely on top of tile rails. Any gap between pan and rail can create an instability.

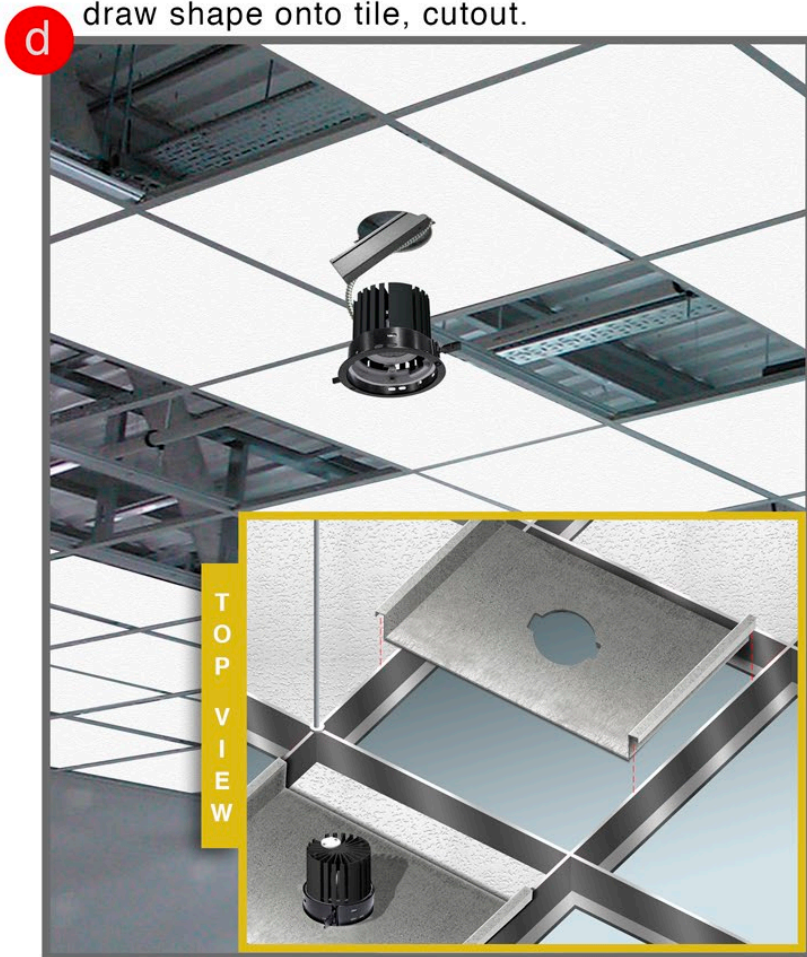


Step D- Slide driver enclosure with light assembly through cutout. Driver enclosure can rest on top of dropped pan.



Step E- Use Phillips screwdriver to adjust ceiling clamp that controls tightness of light assembly to dropped pan/ tile. Magnify **CLOSEUP** to view ceiling clamp



Step F- Finalize install by locking trim into the secured light assembly.

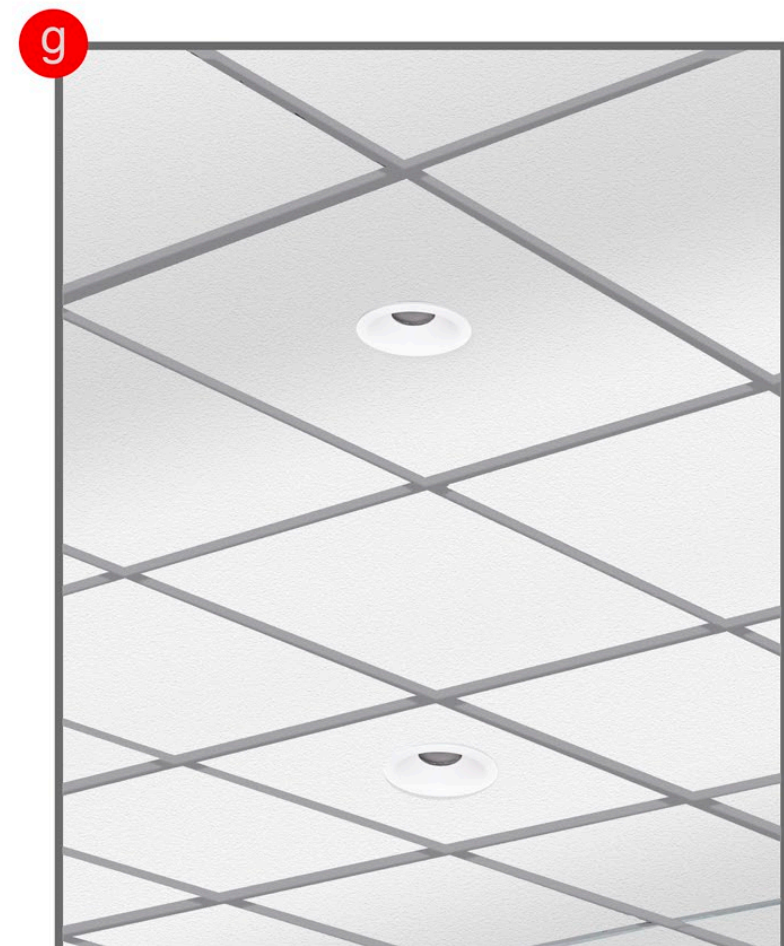

Step G- Repeat process with all tiling elements that require a light assembly.

How to secure with safety cables?

Safety cable clip clicks into Receiver safety cable

Push-pin Fastener

Push-pin fastener locks trim safety cable trim to lamp assembly

Dropped Pan with Round Flange Trim/ Flanged Receivers Instruction Sheet for GRF, GR, GRO, GRW Series

TRIMS AVAILABLE

GRF- Round Flange	GR- Round Flange	GRO- Round Flange	GRW- Round Flange