




Step A- Slide drop pan over metal rails of suspended ceiling. Drop pan can be used as a template. Lay drop pan on top of tile, position, draw shape onto tile, cutout.

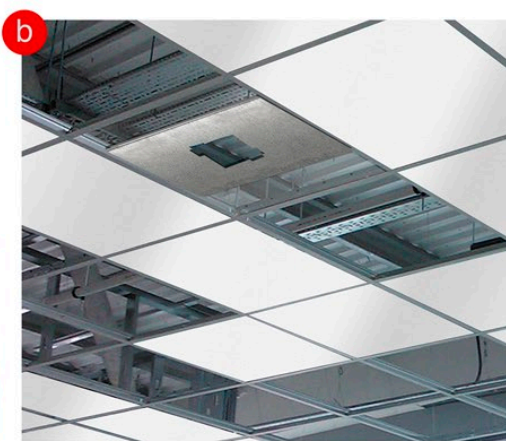


Step B- Make sure dropped pan has enough clearance beneath for ceiling tile install. Tile slides in underneath dropped pan.

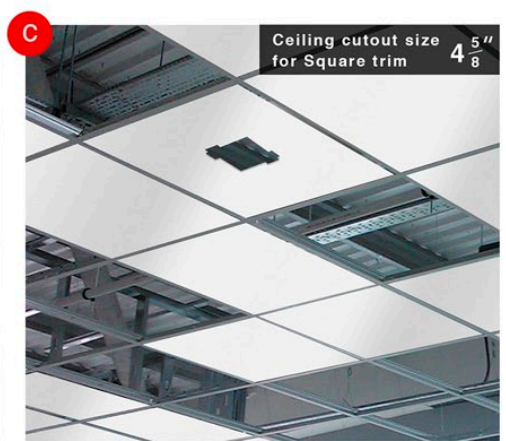


Step C- Check to see that dropped pan is resting securely on top of tile rails. Any gap between pan and rail can create an instability.

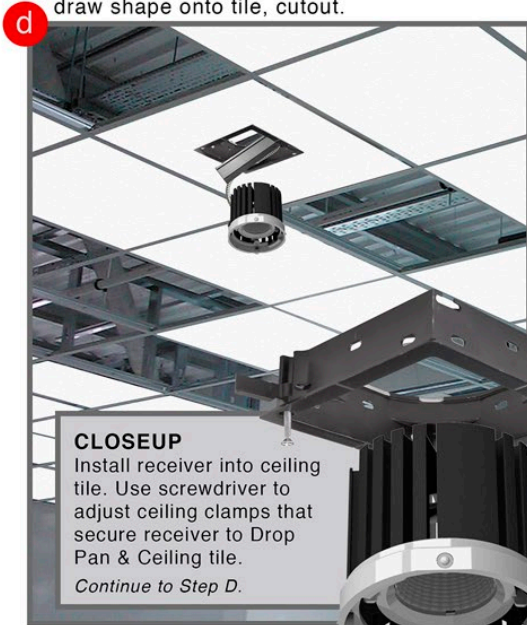


CLOSEUP
Install receiver into ceiling tile. Use screwdriver to adjust ceiling clamps that secure receiver to Drop Pan & Ceiling tile.
Continue to Step D.

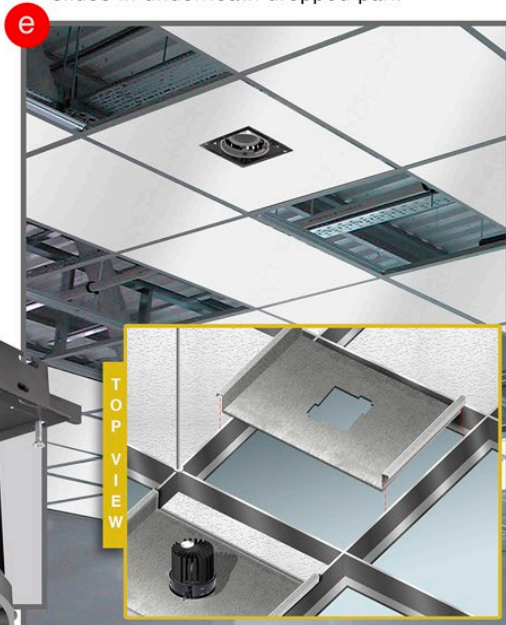

Step E- Align ball plungers on light assembly to top holes on receiver. Driver enclosure can rest on top of dropped pan.

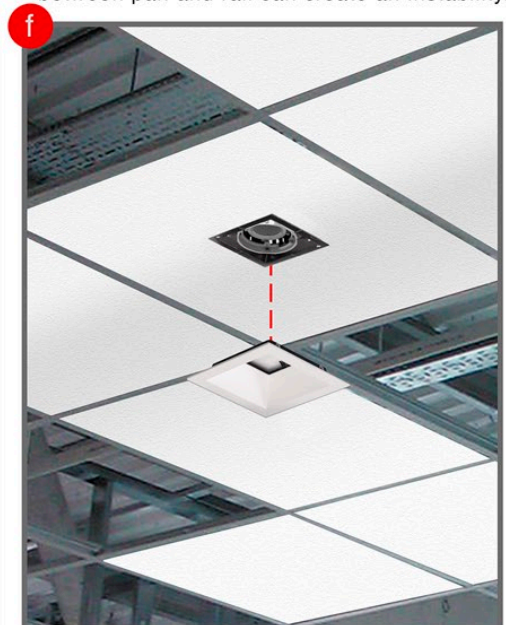

Step F- Finalize install by locking trim into the secured light assembly.

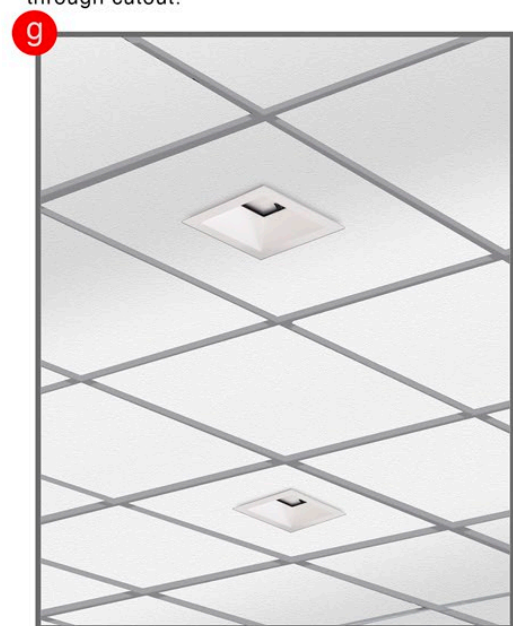

Step G- Repeat process with all tiling elements that require a light assembly.

How to secure with safety cables?



Safety cable clip clicks into Plaster Receiver safety cable

Push-pin Fastener

Push-pin fastener locks trim safety cable trim to lamp assembly



Drop Pan with Square Flanged Trim Instruction Sheet for GRF, GR, GRO, GRW Series

TRIMS AVAILABLE

