






Exposed Ceiling Joists

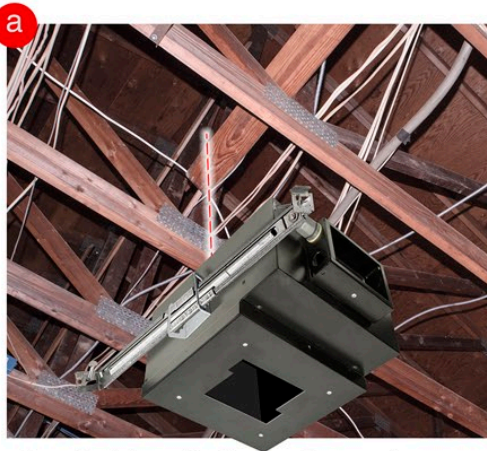

**Step A-** Adjustable Hanger Bars anchor housing to ceiling joists with screws

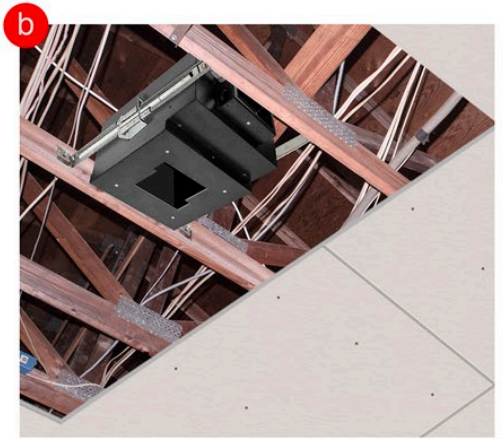

**Step B-** After housing is secured. Continue drywall install, but leave space for wiring.

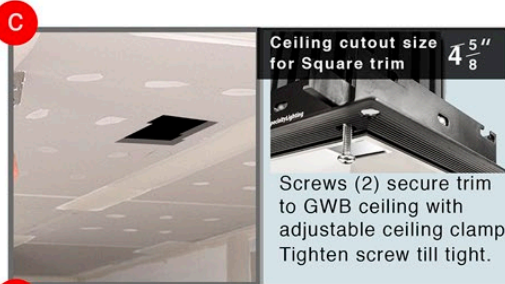

**c**

Ceiling cutout size for Square trim 4 5/8  
Screws (2) secure trim to GWB ceiling with adjustable ceiling clamp. Tighten screw till tight.




**e**


**e1**



**f**

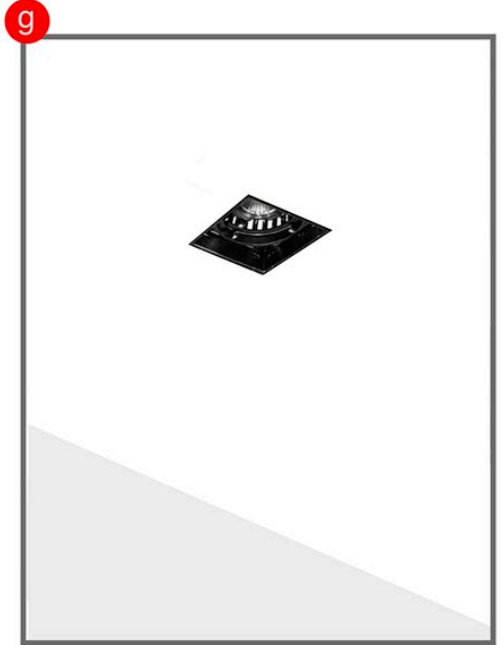

**g**

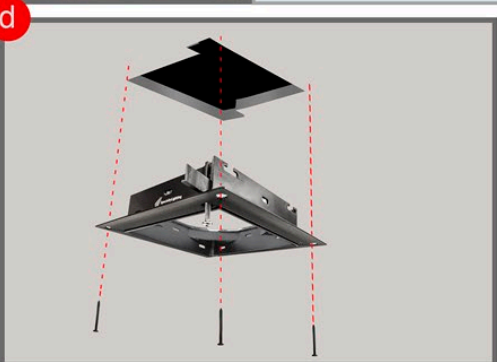

**d**

**Step C-** Cutout opening for light install.  
**Step D-** Attach receiver with GWB screws (4).  
**See Closeup-** tighten receiver to GWB Ceiling.

**Step E-** Plaster receiver flange. Finish Electrical.  
**Step E1-** Apply tape & joint compound  
**Step F-** Slide light assembly into receiver. Finish plastering GWB.

**Step G-** After plaster ceiling has dried, paint over the plaster ceiling.



**h**

**CLOSEUP**  
Ball Plunger on square trim

**How to secure with safety cables?**




Safety cable clip clicks into Plaster Receiver safety cable

Push-pin Fastener

Push-pin fastener locks trim safety cable trim to lamp assembly



**IC Rated Housing Plaster Receiver Square ZT Trim Instruction Sheet for GRF, GR, GRO, GRW Series**

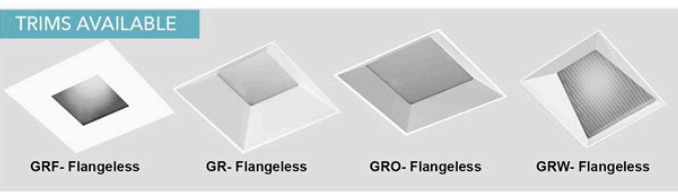

\*Trim in view is GR- Square Flangeless Trim

**Step H-** Make sure trim ball plungers clicks into receiver to secure.

