





Step 1- Exposed Ceiling Joists



Step 2- Adjustable Mounting Rails anchor housing to ceiling joists with screws

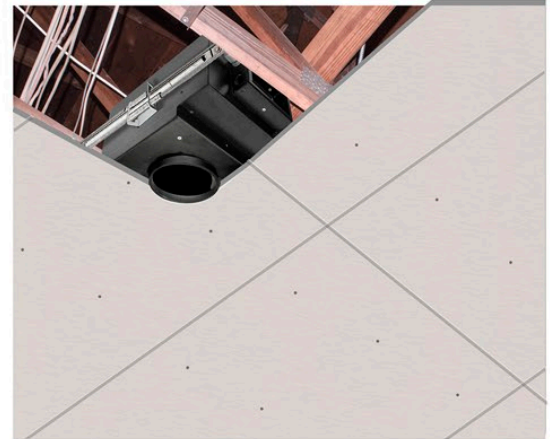


Step 3- After housing is secured, finish GWB ceiling installation.

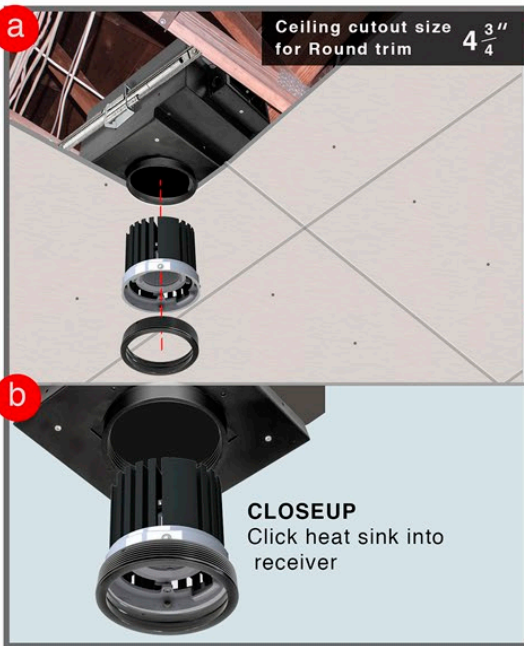

Step 4a/b- After connecting heat sink to receiver, check wiring for final install.



Step 4c- Finalize wiring, screw receiver with attach light fixture into housing.
Step 4d- Apply tape and joint compound (dry). Plaster over GWB ceiling

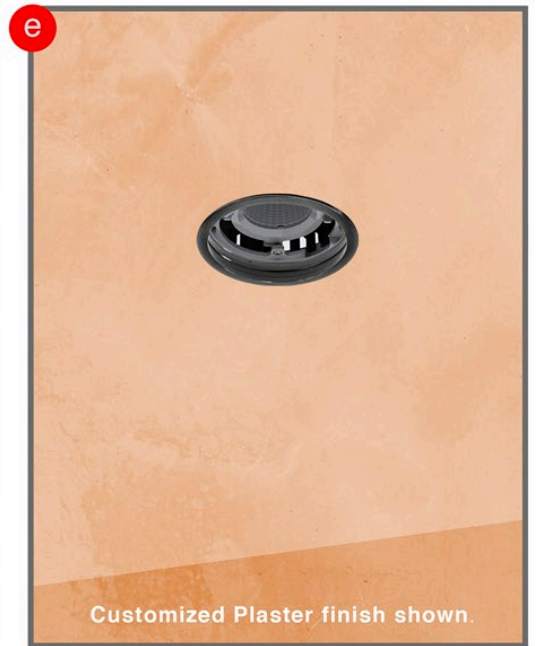


Step 4e- 1 or 2 coat plaster job over GWB ceiling. Painting optional depending on plaster finish.



IMPORTANT
 Ball Plunger on round trim needs to click into receiver


*Trim in view is GRW- Round Flange Trim

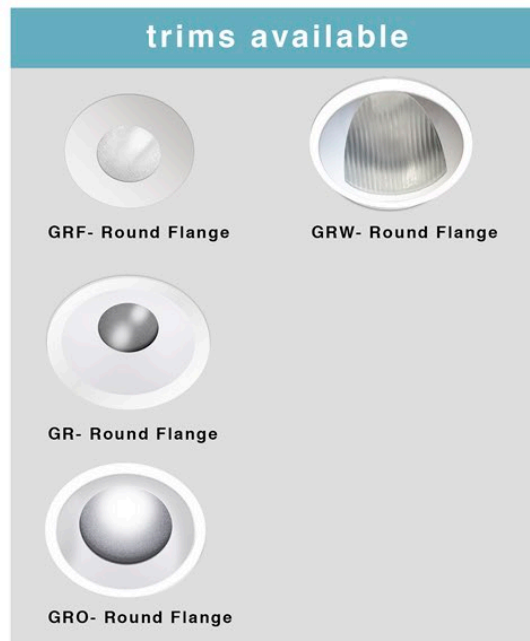

trims available



GRF- Round Flange

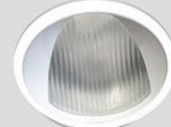

GRW- Round Flange



GR- Round Flange



GRO- Round Flange



IC Rated Flanged Round Trim with Housing
Instruction Sheet for GRF, GR, GRO, GRW Series



Step 6- Final step is to make sure trim ball plungers clicks into receiver to secure.