





Exposed Ceiling Joists

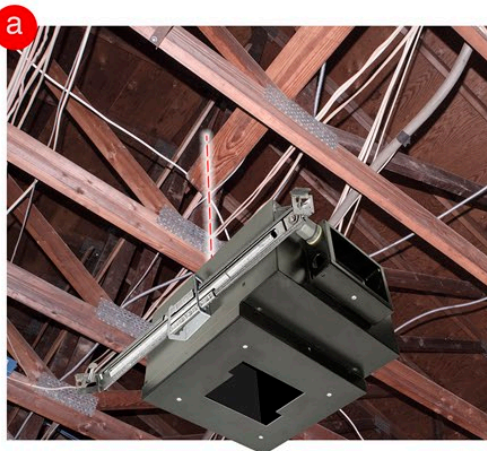

Step A- Adjustable Hanger Bars anchor housing to ceiling joists with screws



Step B- After housing is secured. Continue drywall install, but leave space for wiring.

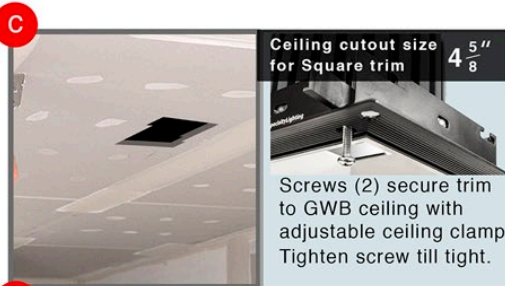

c

Ceiling cutout size for Square trim 4 ⁵/₈
Screws (2) secure trim to GWB ceiling with adjustable ceiling clamp. Tighten screw till tight.




e


e1



f

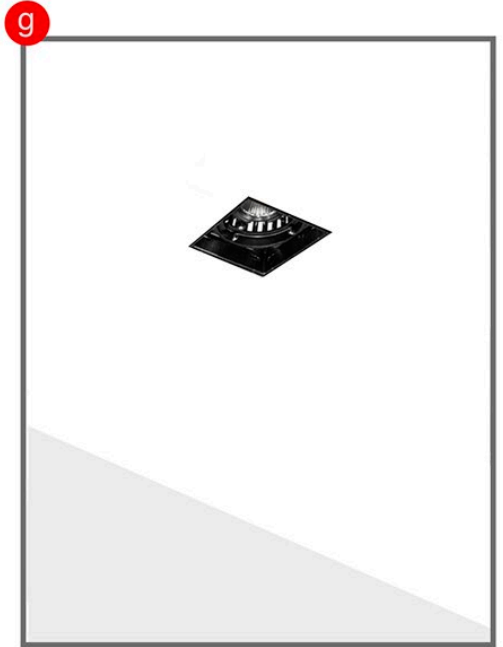

g

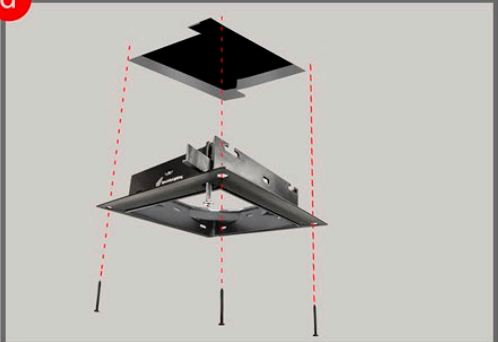

d

Step C- Cutout opening for light install.
Step D- Attach receiver with GWB screws (4).
See Closeup- tighten receiver to GWB Ceiling.

Step E- Plaster receiver flange. Finish Electrical.
Step E1- Apply tape & joint compound
Step F- Slide light assembly into receiver. Finish plastering GWB.

Step G- After plaster ceiling has dried, paint over the plaster ceiling.



h

CLOSEUP
Ball Plunger on square trim



*Trim in view is GR- Square Flangeless Trim

Step H- Make sure trim ball plungers clicks into receiver to secure.

How to secure with safety cables?



Safety cable clip clicks into Plaster Receiver safety cable

Push-pin Fastener

Push-pin fastener locks trim safety cable trim to lamp assembly



NIC Rated Housing Plaster Receiver Square ZT Trim Instruction Sheet for GRF, GR, GRO, GRW Series

