







Exposed Ceiling Joists

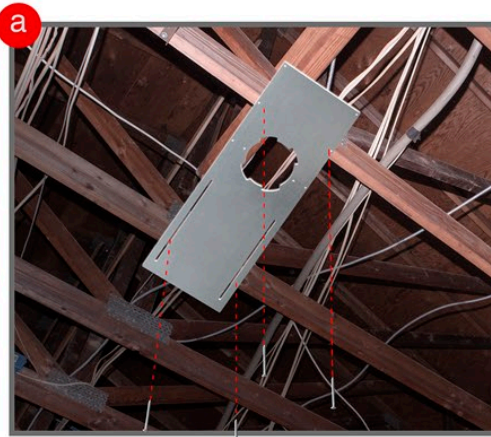


Step A- Install New Pan into ceiling joists. New Pan is reversible.

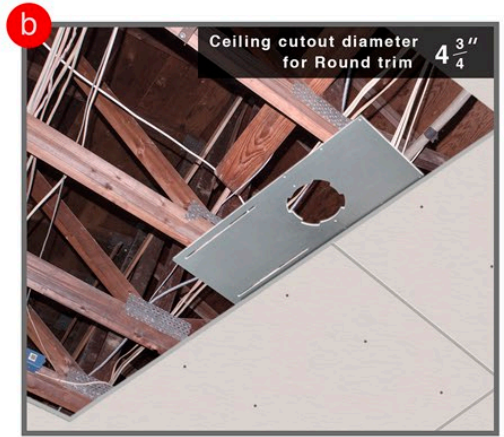

Step B- Place GWB over new pan

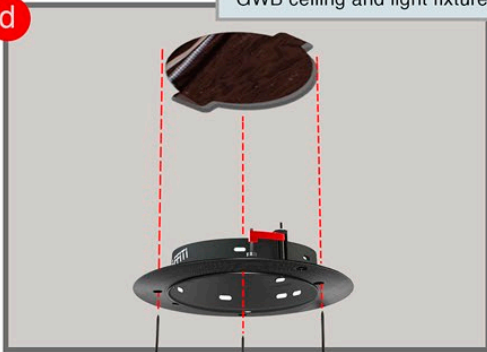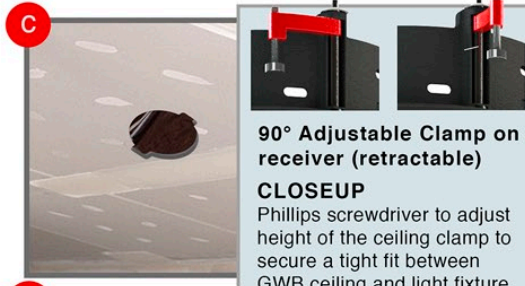

Step C- Cutout opening for light install.
Step D- Attach receiver with GWB screws (4).
See Closeup- tighten receiver to GWB Ceiling.

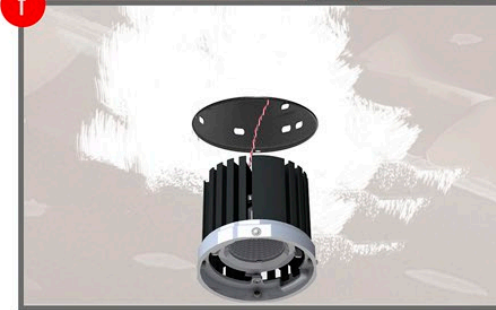

Step E- Plaster receiver flange. Finish Electrical.
Step E1- Apply tape & joint compound
Step F- Slide light assembly into receiver. Finish plastering GWB.



Step G- After plaster ceiling has dried, paint over the plaster ceiling.



Step H- Make sure trim ball plungers clicks into receiver to secure.

How to secure with safety cables?



Safety cable clip clicks into Plaster Receiver safety cable



Push-pin Fastener

Push-pin fastener locks trim safety cable trim to lamp assembly



New Pan Install Plaster Flanged Round Trim Instruction Sheet for GRF, GR, GRO, GRW Series

TRIMS AVAILABLE



GRF- Flangeless



GR- Flangeless



GRO- Flangeless



GRW- Flangeless

